

# TV56-010H

## TELEVISION MOUNT

### INSTALLATION INSTRUCTIONS



Thank you for choosing a MORRyde television mount! This flip-down ceiling mount is excellent for under-cabinet installation or reinforced ceilings. Flip up to store it out of the way!

#### Key Features and Benefits

- Fits up to a 24" TV
- Up to 100 x 100 VESA pattern
- Tilt and swivel adjustment

#### Range of Motion\*

- Offers 360° of swivel and tilts 0-10°

#### Parts List

1. Base Mount
2. TV Bracket
3. Hardware Pack

**⚠ WARNING** Improper installation may cause property damage or personal injury. The mounting surface may require reinforcement as it must be capable of supporting five times the combined weight of the television and the mount.

#### Product and Safety Information

The TV56-010H mounts flat panel televisions or monitors to a horizontal surface.

**NOTE:** This mount is not intended for use on brick, concrete, concrete block.

#### VESA\* Mounting Plates

- 75mm x 75mm
- 100mm x 100mm

\* Video Electronics Standards Association

#### Weight Capacity

- 25 lbs

The installer assumes all responsibility of verifying that any installation method and mounting surface securely support the television and mount. MORRyde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORRyde, hardware not provided by MORRyde, or incorrect use of the mount during travel or otherwise.

## Preparation

### Television Stand

If applicable, remove the original base stand in accordance with the television owner's manual.

### Hardware

Use appropriate hardware for securing your television to the mount and mounting your television to the mounting surface.



M4x12mm Bolt (4)



M5x12mm Bolt (4)



M6x12mm Bolt (4)



1/4" x 1" Lag Bolt (8)



M6 Flat Washer (8)



#10 Flat Washer (8)



1/4" Flat Washer (8)

# Installation


**⚠️ WARNING** Using mounting hardware too long for your application may puncture exterior structures.

**⚠️ WARNING** If your television came with a stand, please remove the stand by referring to your television's owners manual and ensure the hardware has been removed from the mounting holes.

## STEP 1

### Secure mount to reinforced ceiling or mounting surface:

Pre-drill holes using a 1/8" drill bit. Use 1/4" lag bolts and 1/4" washers or appropriate hardware for the structure to secure the mount to the reinforced mounting surface.

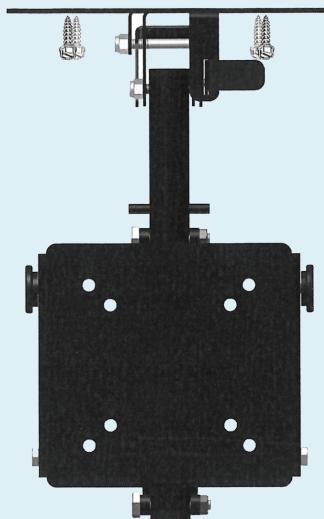




Top view of mounting holes.

**⚠️ CAUTION** **Structure must be reinforced.** The size and weight of your television plus the weight of the mount must be properly supported. MORryde is responsible for the design and manufacturing of our parts; we are not responsible for the structure it is mounted to or the construction method used to reinforce the mounting surface.

## STEP 2


### Secure the television or monitor to the mount:

Line up the hole pattern on your television with the matching hole pattern on the mounting plate. Use the appropriate mounting hardware and washers to secure the television to the mounting plate.

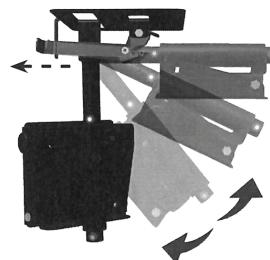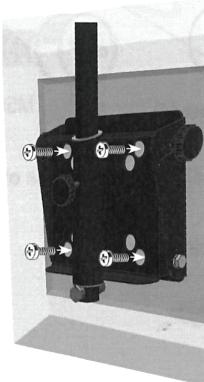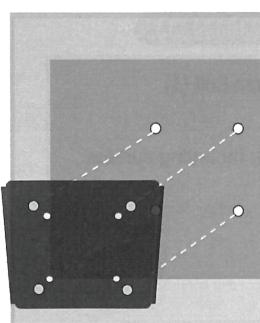


**To flip down:**  
While supporting the TV with one hand, pull lever to release lock and gently guide TV into the vertical position.

**To flip up:**  
Gently lift TV toward the ceiling and allow it to lock into place.

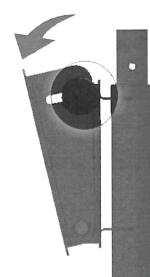

Loosen knobs on side to tilt and then tighten in place for desired viewing angle.

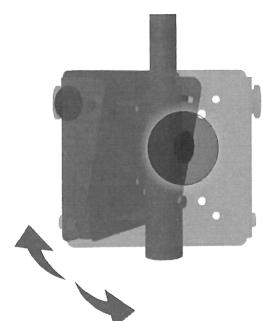

Loosen knob in back to swivel and then tighten in place for desired viewing angle.

**⚠️ WARNING** Step 2 may require two people to lift the television safely into place. MORryde is not responsible for property damage and/or personal injury due to improper or unsafe installation practices.