



DURA FAUCET®

**DF-SA189 - RV Exterior Spray Box and Quick Connect
Sprayer and Hose**



MAINTENANCE AND CLEANING

Cleaning Tips: The finish on your product is designed to retain its beautiful sheen for years. To maintain the original look of the finish, a little care and caution should be used. We recommend the use of mild soap and water to clean the product.

THE USE OF ABRASIVE CLEANERS MAY SCRATCH THE FINISH OR CAUSE OTHER DAMAGE.

RECOMMENDED TOOLS AND MATERIALS

- ◆ Adjustable wrench
- ◆ Plumber's tape
- ◆ Phillips Screwdriver
- ◆ Ruler
- ◆ Level
- ◆ Sealant

BEFORE YOU BEGIN

There are a variety of things to do before installing any new plumbing system into your RV. Before you begin work make sure you:

- ◆ Shut off the main water supply
- ◆ Cover your drain to prevent loss of parts
- ◆ Observed any local plumbing codes
- ◆ Inspect fixture for damage - Replace as necessary

* Dura Faucet reserves the right to make any revisions in the design of products without notice.


INSTALLATION

1 New Shower Box Preparation

Completely shut off the water supply to the shower box. Remove the old shower box by disconnecting it from the water supply and unscrewing it from the RV. If installing this box for the first time on an RV a 7.375" (W) x 4.125" (H) hole will need to be cut out of RV exterior to make space.


2 Install Shower Faucet

After installing the Box, insert the faucet inlet tubes through the back of the box. Once inserted attach the mounting nuts to secure the faucet. Then, Connect the water supply lines from the RV to the inlet tubes of the shower faucet. As you lace the shower faucet, hot water should be on your left, and cold water on your right. Note: Hand tighten the nuts over the washer and then tighten $\frac{1}{4}$ turn with a wrench. Overtightening the nut can cause leaking.

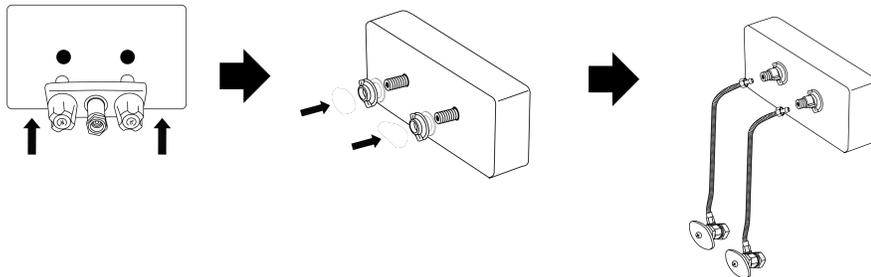


3 Install Shower Box

Open the box's door by pressing the button, and mount securely to the RV. When mounting, you may use sealants around the edge of the shower box.

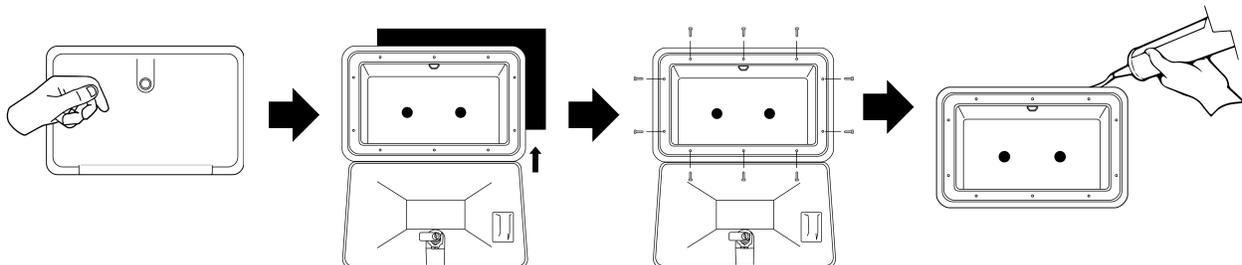


4 Attach Sprayer

Next, attach the sprayer into the water diverter, which is found between the two faucet's knobs.

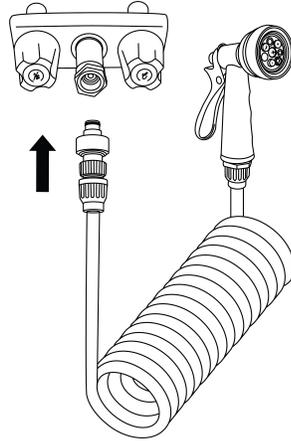

5 Turn on Water Supplies and Check for Leaks

Once installation of hose is complete, turn the water supply on and allow both hot and cold water to run for at least 30 to 60 seconds each. While water is running, check for leaks not only inside and outside of the wall, but also internally behind the wall where water supply hoses are connecting. Everything look good? Great. Now you can start enjoying your new Dura Faucet product!

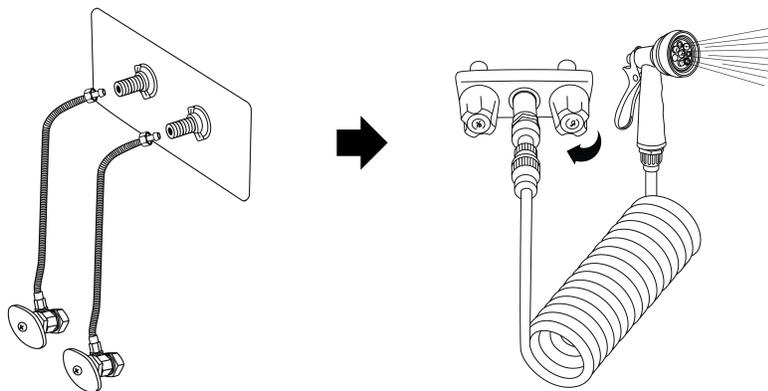

SPEC DRAWING / PARTS

