

WARNING: Under no circumstances do we recommend exceeding the towing vehicle manufacturers recommended vehicles towing capacity. Failure to follow instructions for installation and use may cause property damage, injury or death.


READ ALL INSTRUCTIONS BEFORE STARTING THE INSTALLATION OR USE

Tools and Equipment Required to Install:

- Hammer

What's Included:

- Spacer Plates – QTY 2
- Roll Pin – QTY 4

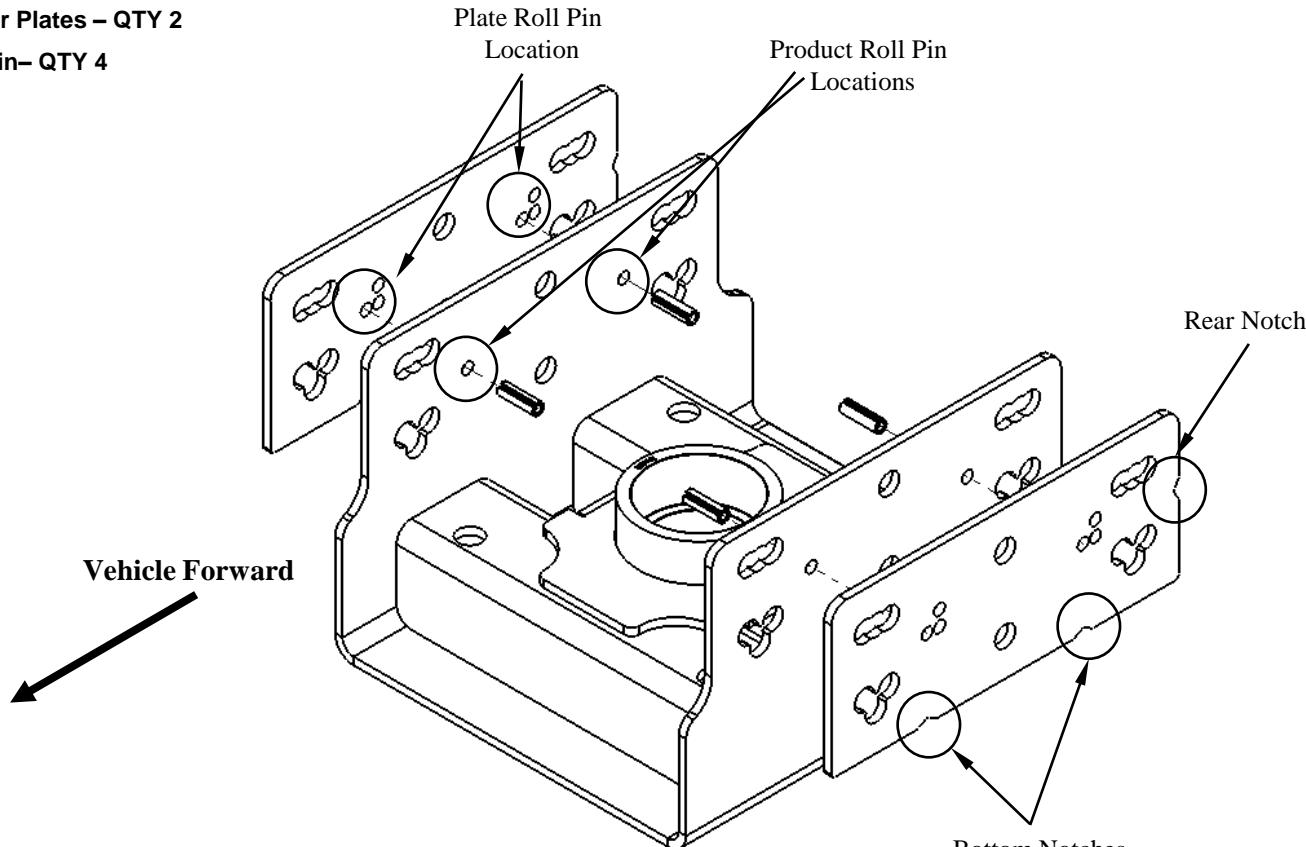

Installation:

1. Make sure Spacer Plate is in the correct orientation, with rear notch in the back, and bottom notches on the bottom, align holes with your product. Note: Some Reese products may have different style bolt patterns, which may use one of the (3) Plate Roll Pin locations.
2. Install roll pins in two locations using a hammer, to attach each side. Do not protrude pins past outer wall of the Spacer Plates.
3. Follow your specific product instructions to install on trailer properly.



Note: For any questions, please

- Scan QR code
- Visit www.reeseprod.com/qr-product.aspx
- Or call Technical Service at: 1-800-632-3290